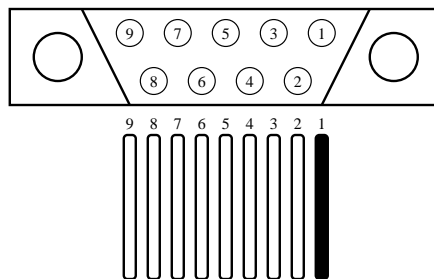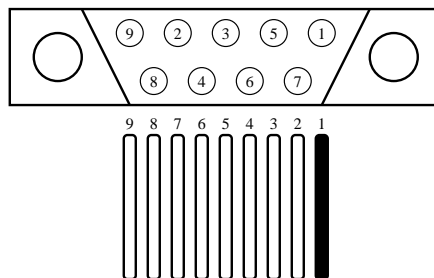# ERRATA
P112 Single Board Computer Kit

The serial port pigtails supplied in this kit are not wired correctly for use with the P112 single board computer. Unfortunately, I could not return these pigtails to where I bought them.

The following diagram generates the same pinout as a 9-pin serial port found on a typical x86 PC.

Serial connector wired straight through (solder side view).

If you need to use a null modem adapter to connect to a serial terminal, use this diagram to eliminate the need for an external adapter:

Serial connector with null modem crossovers (solder side view).

The above diagram will also allow you to connect the P112 to an x86-style serial port with a 9-pin to 9-pin straight-through cable.